


Z1300-A3 Wiring Diagram

(West German, U.K. Models)

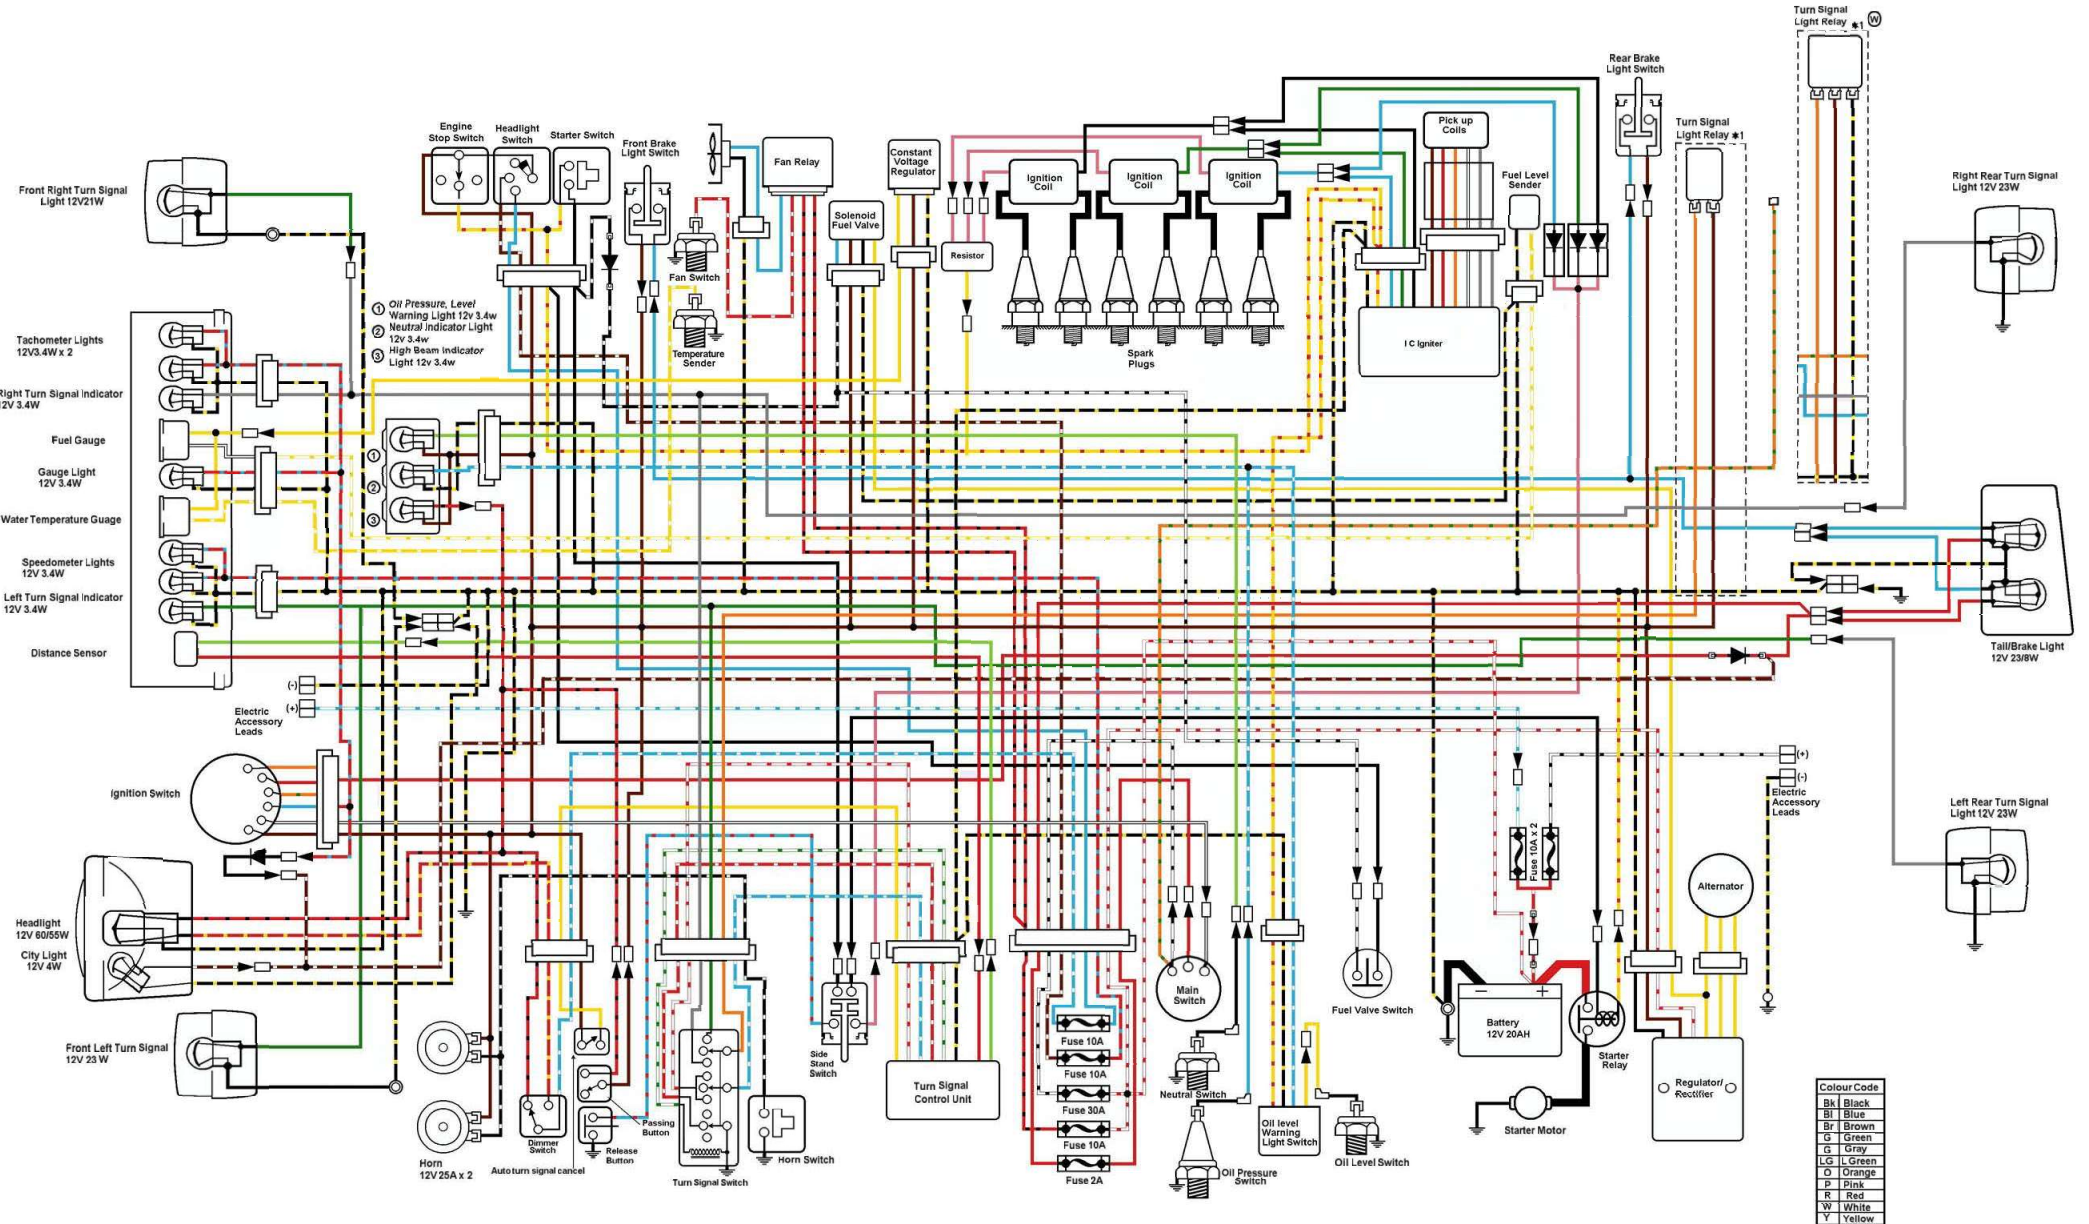

Colour Code	
Bk	Black
Bl	Blue
Br	Brown
G	Green
Gr	Gray
LG	L Green
O	Orange
P	Pink
R	Red
W	White
Y	Yellow

LEFT HANDLEBAR SWITCH CONNECTIONS																
Dimmer Switch	Automatic Turn Signal Cancel Switch			Turn Signal Switch				Horn Switch	Passing Switch	Release Switch	Starter Lockout Switch					
HI	R/Bk	Bl/Y	R/Y	Br	Y	R	Green	Orange	Gray	W/R	Bl/W	R/W	Bl/W	Bl/W	Bl/W	Bl/W
LO	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON

IGNITION SWITCH CONNECTIONS						
Battery 1	Ignition	Tail 1	Tail 2	Battery 2	Tail 3	
OFF	White	Brown	Blue	Red	Orange	O/G
ON	ON	ON	ON	ON	ON	ON
PARK	ON	ON	ON	ON	ON	ON

MAIN SWITCH CONNECTIONS		
Battery	Ignition	Tail
OFF	W/Bk	White
ON	ON	ON
PARK	ON	ON

RIGHT HANDLEBAR SWITCH CONNECTIONS						
Engine Stop Switch	Headlight Switch			Starter Switch		
OFF	Y/R	Br	Br/W	Brown	Bl	Black
ON	ON	ON	ON	ON	ON	ON
RUN	ON	ON	ON	ON	ON	ON
OFF	ON	ON	ON	ON	ON	ON

SUPPLEMENT -- 1981 MODEL