


KZ1300-A3 Wiring Diagram

(US, Canadian Models)

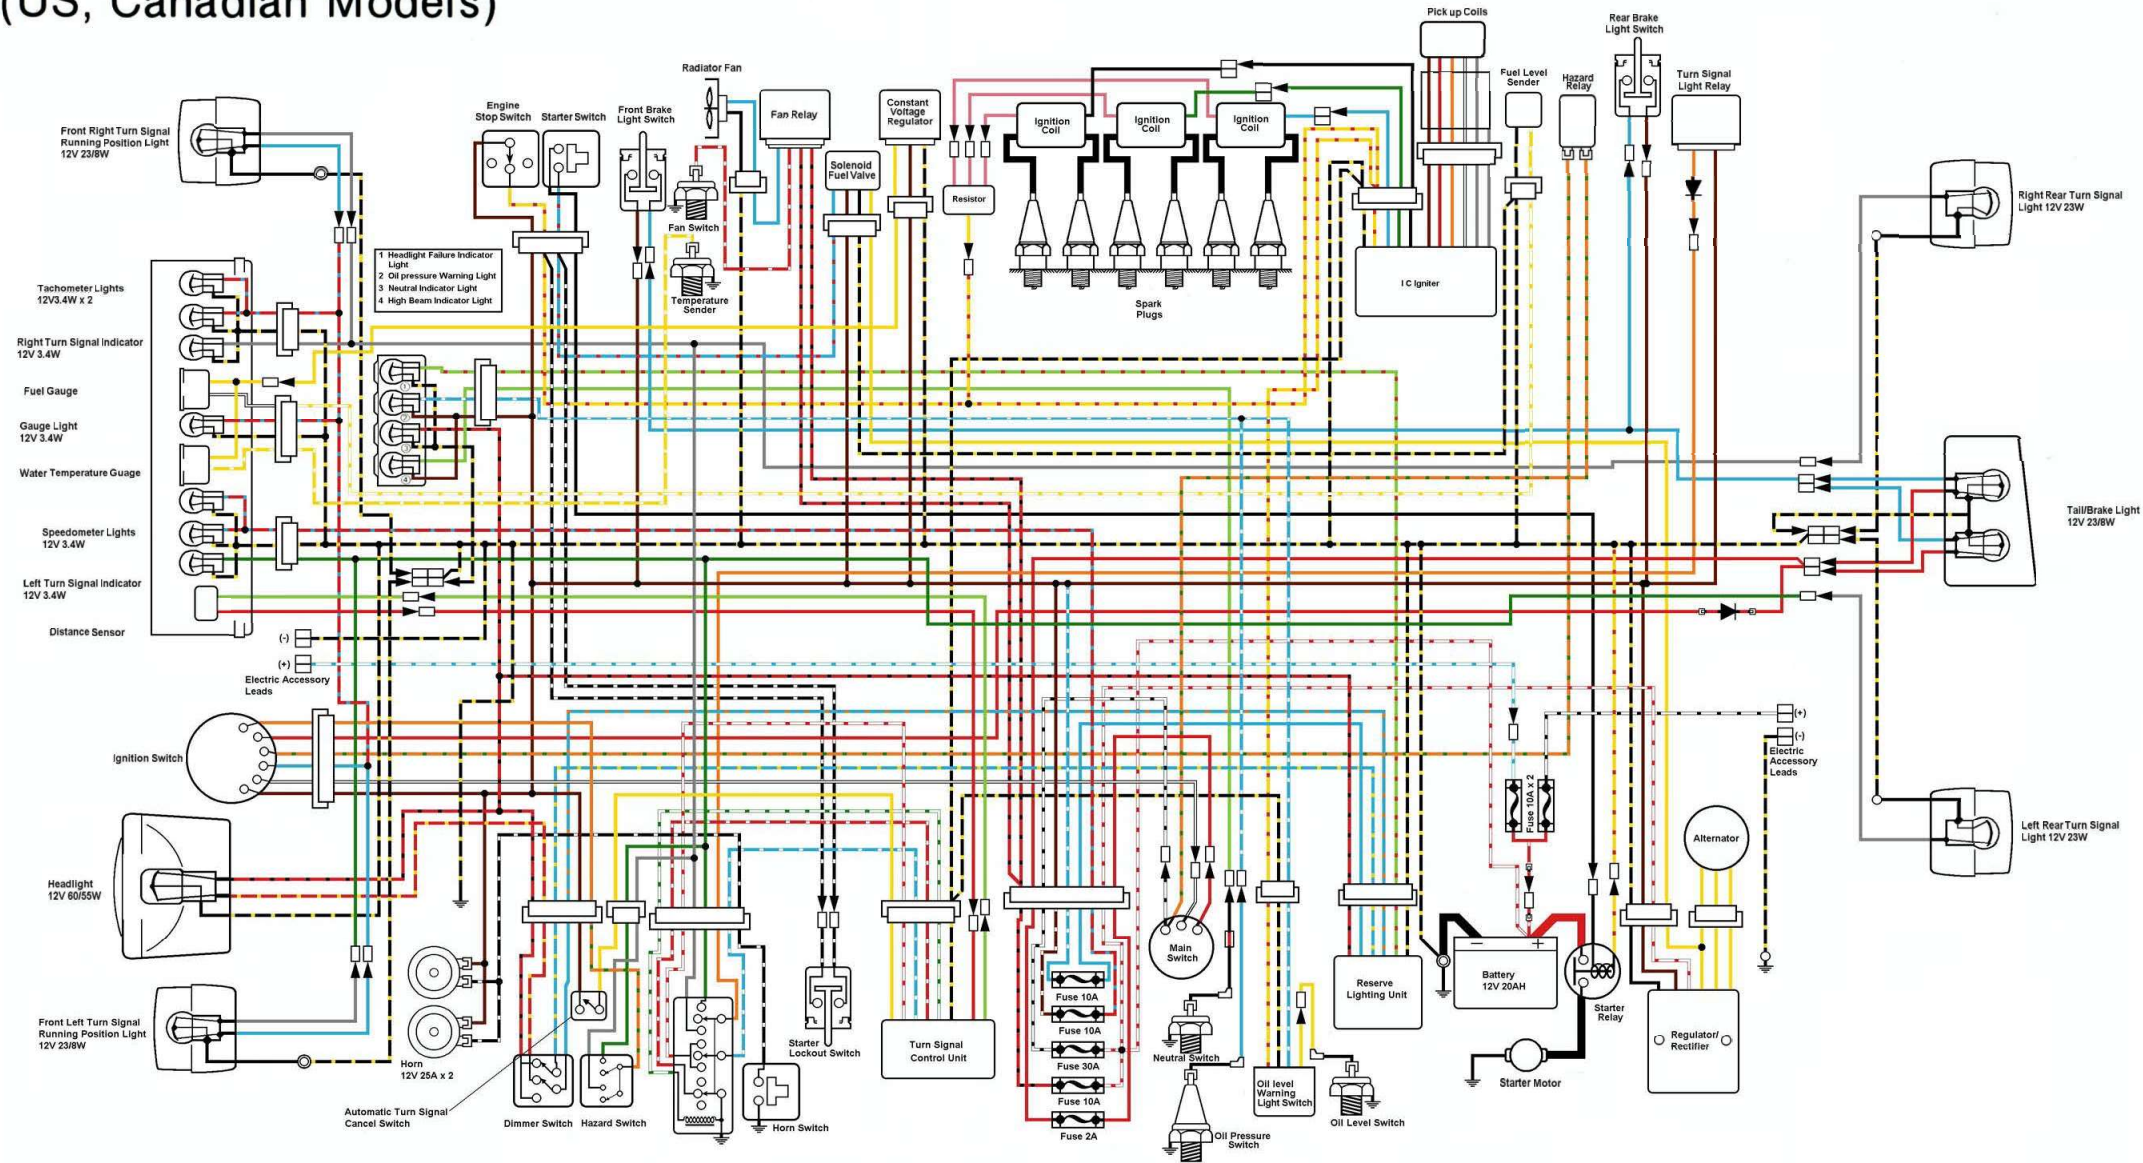

LEFT HANDLEBAR SWITCH CONNECTIONS																					
Dimmer Switch					Hazard Switch			Automatic Turn Signal Cancel Switch			Turn Signal Switch					Horn Switch					
	R/Bk	Bl/Y	R/Y	Blue	Green	O/G	Gray		Br	Y		R	Green	Orange	Gray	W/R	Bl/W	R/W		Bk/W	
HI																					
LO																					

IGNITION SWITCH CONNECTIONS					
Battery 1	Ignition	Tail 1	Tail 2	Battery 2	Tail 3
White	Brown	Blue	Red	Orange	O/G
OFF	ON	ON	ON	ON	ON
PARK	ON	ON	ON	ON	ON

MAIN SWITCH CONNECTIONS		
Battery	Ignition	Tail
W/Bk	White	Red
OFF	ON	ON
PARK	ON	ON

RIGHT HANDLEBAR SWITCH CONNECTIONS			
Engine Stop Switch		Starter Switch	
Y/R	Br	Black	Y/R
OFF	ON	ON	ON
PUSH	ON	ON	ON

Colour Code	
Bk	Black
Bl	Blue
Br	Brown
G	Green
O	Orange
P	Pink
R	Red
W	White
Y	Yellow