


Z1300-A3 Wiring Diagram

(European Model, except W/German and U.K. models)

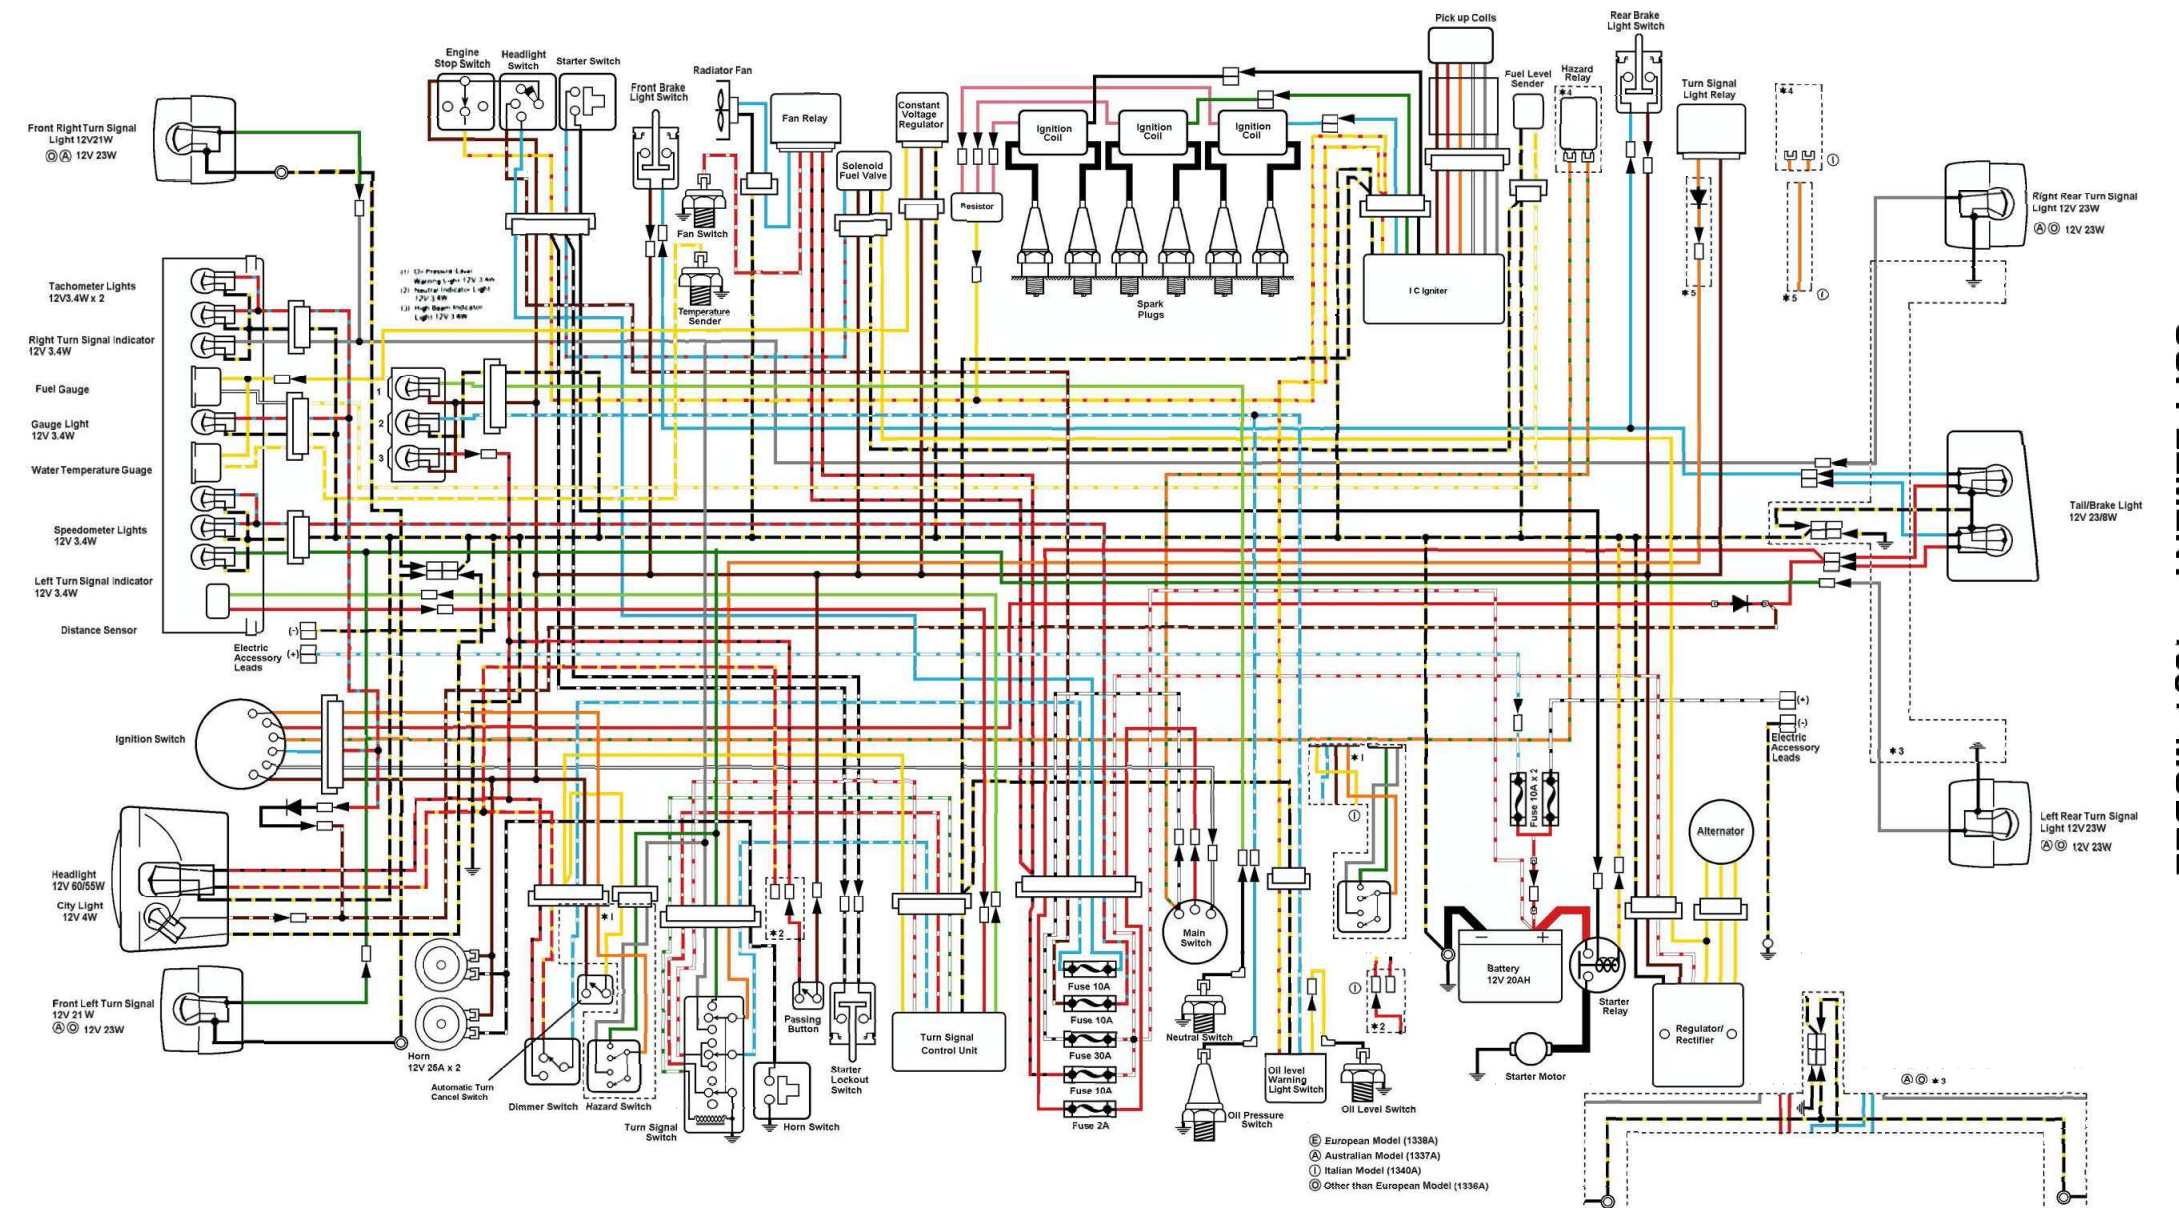

Dimmer Switch	Hazard Switch	Automatic Turn Signal Cancel Switch	Turn Signal Switch	Horn Switch	Passing Switch															
HI	R/Bk	B/Y	R/Y	Green	O/G	Gray	Br	Y	R	Green	Orange	Gray	W/R	Bl/W	R/W	⚡	Bk/W	⚡	Brown	R/Bk
LO			ON						L							Push				

Battery 1	Ignition	Tail 1	Tail 2	Battery 2	Tail 3	
OFF	White	Brown	Blue	Red	Orange	O/G
ON						
PARK						

Engine Stop Switch	Headlight Switch	Starter Switch						
OFF	Y/R	Br	OFF	Br/W	Brown	Bl	Black	Y/R
RUN			ON					
OFF			OFF	UN				

Battery	Ignition	Tail
OFF	White	Red
ON		
PARK		

Bk	Black
Bl	Blue
Br	Brown
G	Green
Gr	Gray
L.G.	Light Green
O	Orange
P	Pink
R	Red
W	White
Y	Yellow